
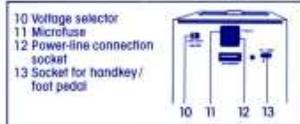


# METTLER AE50/100/200

## Operating elements and connections

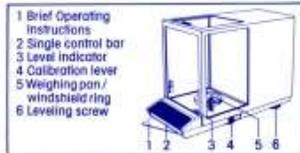

### Preliminary steps

#### Checking the operating voltage

The operating voltage setting must agree with your local power-line voltage; please check this setting and, if needed, change it.

Admissible power-line voltage in the switch positions  
115 V: 82 V...132 V  
220 V: 184 V...265 V

#### Location

- A stable location; as free from vibration as possible.
- Make sure there are no large temperature fluctuations.
- Avoid direct sunlight and drafts.
- Connect the power cable at the work station.

#### Installing the weighing pan; leveling the balance

- Place weighing pan on balance; the conical peg centers the pan in the opening in the base of the weighing chamber.
- The two leveling screws should be adjusted so that the bubble is in the middle of the circle.

Whenever the location of the balance is changed, the balance should be relevelled.

### Operation

#### Brief Operating Instructions

Brief Operating Instructions can be found on a card that swings out from underneath the balance housing.

#### Switching the display on/off

- Briefly press the single control bar; all display segments light up for several seconds:



- Afterwards, the display automatically sets itself to zero.
- Lightly lift the control bar; the display is switched off.

#### Calibration

- Make absolutely sure: The balance must be left connected to the power supply for at least 60 minutes before "calibrating".
- Press and hold the single control bar until CAL appears in the display, then release control bar. The display changes to CAL----, then to CAL 100 (blinks). AE50: CAL50 blinks.
- Move calibration lever all the way to the rear; the display changes to CAL----, followed by 100.0000 (AE50: 50.0000), then to CAL 0 (blinks).
- Move calibration lever all the way back towards the front of the balance; the display changes to ----, followed by zero.

#### Measuring cycle / measuring accuracy

By selecting a particular integration cycle, as well as a particular stability detection step, the balance can be configured according to your weighing location and needs.

- Integration time:
- Step 1: Used for very stable, vibration-free weighing table (short measuring cycle).
  - Step 2: Normal setting.
  - Step 3: Used for unfavorable ambient conditions (long measuring cycle).
- Press the control bar and hold it until -Int- appears in the display, then release the control bar.
  - Immediately press the control bar briefly; the display will change to the next step.
  - Stop at the step you wish to use and wait for the display to return to the weighing mode (zero).

- Stability detector:
- Step 1: Great sensitivity (long pause before data are released).
  - Step 2: Less sensitivity (short pause before data are released).
- Normal setting
- Step: The stability detector is switched off. Please note all that when this is the case, the filling guide (DeltaDisplay) is also switched off (described in Paragraph entitled, "Weighing-in").
- Press the control bar and hold until -ASd- appears in the display, then release control bar.
  - Immediately press control bar again briefly; the display changes to the next step.
  - Stop at the step you wish to use and wait for the display returns to the weighing mode (zero).

Note: After selecting the integration time, you can go directly to the selection of the stability detector setting by holding the control bar down.

#### Taring

- Open the sliding glass door.
- Place a tare container on the weighing pan.
- Close the sliding glass door.
- Press the control bar briefly; the display changes to zero.

The weight of the container is now tared out. To weigh in, the balance weighing range - minus the weight of the tare container - is now available.

Note: It is possible to carry out external taring by using the handkey or foot pedal from the "ACCESSORIES, optional" (connection sockets on rear of balance).

#### Weighing-in

- Open the sliding glass door.
- Fill in substance up to the desired target weight (to read the weight accurately, the door must be closed).

If different components are to be weighed, one after the other, into the same container, it is possible to tare after each weighing and start the next weighing from zero. This can be done until the tare container and all the components together reach the end of the weighing range.

#### Filling guide (DeltaDisplay)




The filling guide (DeltaDisplay) switches on automatically when weighing in substances quickly; the last two digits are blanked out and the display change sequence speeds up. This allows the increase in weight to be followed better. When weighing in slowly towards the target weight, the two digits switch back on. The display change sequence remains rapid. Only when weight changes are very small does the balance switch back to the normal display change with the full number of decimal places.

Stability detector: When stability is achieved (determined by the step selected for the stability detector), the green dot in the display goes out. The result is then stable.

Note: When the green dot lights up in the display, the data interface is blocked; when the green dot goes out (stability), the data interface is unblocked.

#### Further capabilities

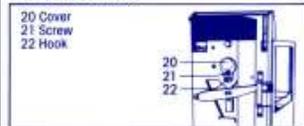

#### GD hanger (for weighing below the balance)

- Open all sliding glass doors.
- Remove the weighing pan. Disconnect power cable.
- Place the balance on its back.
- Loosen the screw on the bottom of the balance.
- Swing the cover to one side.
- Retighten the screw.

Specifications	AE 50	AE 100	AE 200
Readability	0.1 mg	0.1 mg	0.1 mg
Weighting range	0...55 g	0...109 g	0...205 g
Tare range (subtractive)	0...55 g	0...109 g	0...205 g
Reproducibility (standard deviation)	0.1 mg	0.1 mg	0.1 mg
Linearity	±0.2 mg	±0.2 mg	±0.3 mg
Linearity relative to 10 g	±0.1 mg	±0.1 mg	±0.1 mg
Stabilization time (typically)	5 sec		
Integration time (adjustable)	1.5/3/6 sec		
Display sequence - Mettler DeltaDisplay off	0.4 sec		
- Mettler DeltaDisplay on	0.2/0.4 sec		
Stability detector			
- Sensitivity selectable in three steps	1/2/off		
Sensitivity drift (10...30°C)	±2 x 10 <sup>-6</sup> /°C		
Calibration weight (built-in, adjusted to an apparent mass of 8.0 g/cm <sup>3</sup> in an air density of 1200 mg/l)	100 g, adjusted to ±0.1 mg (50 g, adjusted to ±0.1 mg for AE50)		
Dimensions:			
Weighing pan	80 mm dia.		
Open space above weighing pan	215 mm		
Balance housing (W x D x H)	205 x 410 x 290 mm		
Net weight	10.3 kg		
Power supply:			
Voltage, adjustable	115 V 220 V		
Admissible voltage range	82...132 V, 184...265 V		
Frequency	50...60 Hz		
Power consumption	10 VA		
Admissible ambient conditions during operation:			
Temperature	10...40°C		
Relative humidity (non-condensing)	25...85%		

#### What's wrong if...

- ... the entire display does not light up?  
- the fuse is defective.
- ... the OFF display appears?  
- a temporary power failure has taken place. (Press the control bar.)
- ... only the upper horizontal segments light up in the display?  
- the weighing range has been exceeded.
- ... only the lower horizontal segments light up in the display?  
- the calibration weight has been activated.
- ... the weighing result is unstable?  
- there was weight on the pan when the instrument was switched on.
- ... the weighing result is obviously incorrect?  
- the weighing pan is not installed.
- ... only a portion of the display lights up?  
- there was weight on the pan when the instrument was switched on.
- ... the middle horizontal segments in the display are blinking (for more than 30 sec)?  
- there are too many drafts. Close sliding glass doors.
- ... CAL Err appears in the display?  
- the weighing table is unstable.
- ... no CAL appears in the display?  
- the integration time setting is too low.
- ... a zero display does not appear after pressing tare?  
- the object being weighed is not at room temperature.
- ... CAL Err appears in the display?  
- the balance must be calibrated or has been calibrated using the wrong external weight.
- ... a zero display does not appear after pressing tare?  
- a temporary malfunction has occurred (pull out power cable and plug it back in).
- ... CAL Err appears in the display?  
- the weighing table or the load is too unsteady (close sliding glass doors, set a longer integration time and/or change the stability detection setting).
- ... a zero display does not appear after pressing tare?  
- the weighing pan was not unloaded before calibrating the balance, or the wrong external calibration weight was used (return to the weighing mode by pressing and holding the control bar).
- ... a zero display does not appear after pressing tare?  
- a temporary malfunction has occurred (recalibrate balance).
- ... a zero display does not appear after pressing tare?  
- the weighing table or the load is too unsteady (close sliding glass doors, set a longer integration time and/or change the stability detection setting).

A hook is visible in the opening; the object or substance can be weighed by attaching a hanger from this hook.

- Place the balance back on its feet, place the weighing pan back on and level the balance. Plug in power cable.
- With the hanger attached to the hook, press tare.

Note: The weighing pan does not have to be placed back on if the hanger is at least as heavy as the pan. The hanger is not available from METTLER!

### Care and maintenance

#### Cleaning

A cloth with some soapy water is sufficient to clean the weighing pan and housing. Do not use any strong solvents. To remove residues from the weighing chamber, use the small artist's brush that is included in the balance standard equipment (do not blow air through the chamber).

#### Replacing the microfuse

- Disconnect the power cable.
- Turn out the fuse holder (in the power-line connection socket) with a screwdriver.
- Replace the fuse (spare fuse 160 mA slow blow in the fuse holder).
- Place the fuse holder back on.
- Plug the power-line cable back in.

### Accessories

#### Optional equipment

Optional equipment	Order No.
- Draft shield cylinder, can be stocked: 1 unit	38594
- Tweezers, 210 mm long (with plastic tips)	70209
- Density (specific gravity) determination kit	40290
- Foot pedal	48278
- Handkey	42500
- Microfuses, 160 mA slow-blowing (set of 3)	55144
Data interfaces:	
011 Option - CL/RS 232C unidirectional	38750
012 Option - CL/RS 232C bidirectional	38751
013 Option - IEEE488	38752
040 Data Output (unidirectional mode)	38795

#### Standard equipment

- Power-line cable	neutral	87576
	Switzerland	87920
	Euro-Norm	87925
	USA	88668
- Centering disk (for draft shield cylinder)		38609
- Weighing pan, 80 mm dia.		38590
- Hair-bristle brush		70114
- Windshield ring		38688