

## 2. Fuses:

The electronics are protected by a quick blow 5 x 20mm Fuse, 0.5 amp for all models.

To replace the fuse, locate the fuse holder on the back of the housing. Insert a screwdriver into the slot in the cap and push in gently while turning ¼ turn counterclockwise. Allow the cap to come off with the fuse. Remove the fuse from the cap and insert the proper replacement fuse. Push the fuse and cap back into the fuse holder and rotate the cap clockwise until it locks in.

 **CAUTION!** Replace fuse with the correct type and value only.

 **CAUTION!** Ensure that the power is off before replacing the fuse.

## SPECIFICATIONS

<b>Dimensions (HxWxD):</b>	267 x 508 x 252mm (10.5 x 20.0 x 9.9in)
<b>Depth with Rocker Tray:</b>	305mm (12in)
<b>Weight:</b>	11.8 Kg (26 lb)
<b>Speed:</b>	Rocking - 10-70 cycles per minute Rotating - 5-35 RPM Orbital Shaking - 10-70 RPM (3-D, cat. no. SI-1150) 15-100 RPM (Horizontal, cat. no. SI-1175)
<b>Rocking Angle:</b>	±10 degrees from horizontal
<b>Environmental:</b>	The Roto-Shake Genie® is classified as "Installation Category 2". 0°C (32°F) to 38°C (100°F), 95% maximum relative humidity.
<b>Maximum Load:</b>	4.5 Kg (10 lb)
<b>Standard Accessories:</b>	

- 1 clip plate for 12 each 10-13mm tubes
- 1 clip plate for 6 each 15-17mm tubes
- 1 clip plate for 3 each 28-30mm tubes
- 4 magnetic stainless steel bag mounting strips
- 1 non-skid metal rocker tray (305 x 305mm / 12 x 12in)

Additional accessories are available for increased capacity.

